

OMEGA FIRETM APPLICATION INSTRUCTIONS

DESCRIPTION

OMEGA FIRE is a one-component coating having a blend of eight different ceramics combined in a water-based formula to create a barrier against extreme flame impingement and heat migration. The coating can withstand direct flame up to 2000°F (1093°C) by hardening on the surface at first contact, while continuing to provide the necessary insulation value. The resin blend binds the compounds together and forms a char to matrix the ceramics across the face of the coating, facing the flame.

OMEGA FIRE is designed to stay intact with constant adhesion at extreme temperatures. It is applied over HOT PIPE COATING to create a system to use over structural steel.

SURFACE PREPARATION

New construction (metal, concrete, masonry and composite)

- Power wash surface (3,500 psi) to remove dirt, oil tar, grease and film
- Surface must be completely dry
- Apply coating directly over substrate

Previously coated (metal, concrete, masonry and composite)

- Power wash surface (3,500 psi) to remove loose or flaking paint, rust and salts, and to clean the surface of dirt, oil, tar grease and film
- Surface must be completely dry
- Apply coating directly over substrate. If existing coating surface is glossed, it must be sanded and roughed before application, no gloss.

NOTE: If pack rust, scale or bright glossy surfaces exist, they must be removed by grit blast, power tool or needle gun. Once removed, begin with Step 1 (power wash).

NOTE: Salt contamination on a surface can come as a result of salt water, fertilizers, and car exhaust. Use Chlor*Rid or equivalent to decontaminate surface if salts are present. Acceptable levels: Nitrates: 5-10 mcg/cm², Sulfates: 5-10 mcg/cm², Chlorides: 3-5 mcg/cm².

NOTE: OMEGA FIRE can be applied to existing coatings as long as that coating is solidly bonded to the substrate.

MIXING

- When container is opened, it will appear to be dry
- Stir mechanically for seven minutes to loosen up the coating. If necessary, up to one quart of water per pail can be added.
- Apply immediately





OMEGA FIRETM APPLICATION INSTRUCTIONS

NOTE: Once container is opened and not fully used, snap the lid back in place and the remainder of the product can be stored for future use (the lid must be firmly in place.)

APPLICATION

OMEGA FIRE can be applied by sprayer or trowel.

- For application by airless, use a Graco 833 (4 gallon per minute) with a carbon steel or titanium tip sized at .035-.045. All filters should be removed from the sprayer, as they will trap the ceramics.
- Graco TexSpray 1500 using the smallest tip supplied can be used to spray this coating
- Apply multiple coats and build up for optimal results
- Never apply this coating when there is a threat of rain on the day of application

NOTE: If OMEGA FIRE (SP2001F) is applied on the exterior, it must be top-coated with ENAMO GRIP or SUPER THERM for UV protection, weathering, and durability.

NOTE: Remove all filters from gun and machine to avoid trapping ceramics.

MINIMUM SPREAD RATES (mil thickness)

3 hour protection = 670 mils wet/500 mils dry

CURE TIME

- Four hours to touch
- Recoat window is twelve hours at 70°F or longer
- Fully cures in twenty-one days

TEMPERATURE

- Apply between 50°F and 100°F
- Store between 40°F and 100°F

CLEAN-UP EQUIPMENT

- After completion, spray system should be cleaned with soap and water
- After completion, trowels can be cleaned with soap and water, stored and reused

LIMITATION OF LIABILITY: All recommendations or suggestions relating to the use of the products, whether in technical documentation, or in response to a specific enquiry, or otherwise, are based on data which to the best of our knowledge is reliable. The products and information are designed for users having the requisite knowledge and industrial skills, and the end-user has the responsibility to determine the suitability of the product for its intended use. SPE has no control over either the quality of condition of the substrate, or the many factors affecting the use and application of the product. Therefore, SPE does not accept any liability arising from loss, injury, or damage resulting from such use or the contents of this data sheet. The information contained in this data sheet is subject to modification as a result of practical experience and continuous product development. This data sheet replaces and annuls all previous issues and the user has the responsibility to ensure that this sheet is current prior to using the product.

Sep-14

